



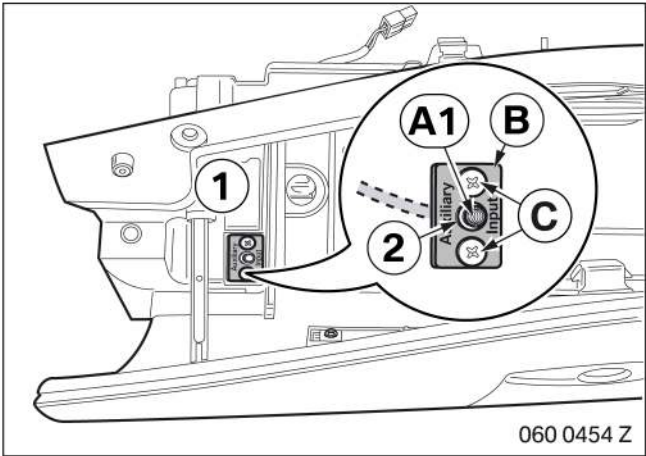
4. To install and connect the AUX connector wiring harness in E60 and E61 cars

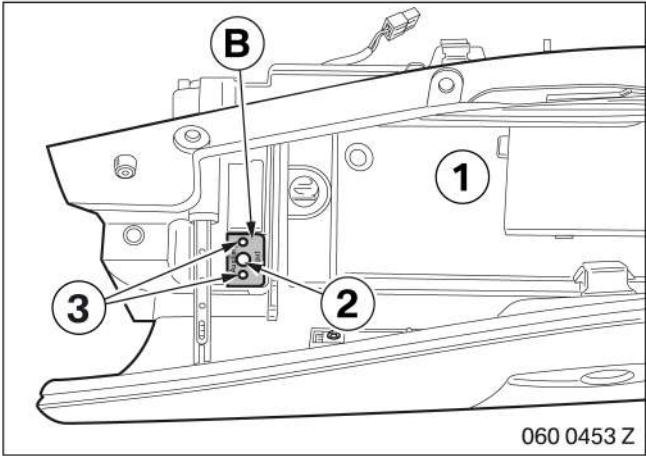

 All holes must be drilled precisely as shown in the illustration. ◀

Place the mounting plate **B** in the glove compartment (1) and mark the position of the holes.

Drill the hole (2) with a 9 mm twist drill bit and holes (3) with a 2 mm twist drill bit in the glove compartment.



Insert branch **A1** in the glove compartment (1) and secure it to mounting plate **B** with a knurled nut (2).

Secure mounting plate **B** to the glove compartment (1) using Philips screws **C**.